







frank 4 in 1 Cot

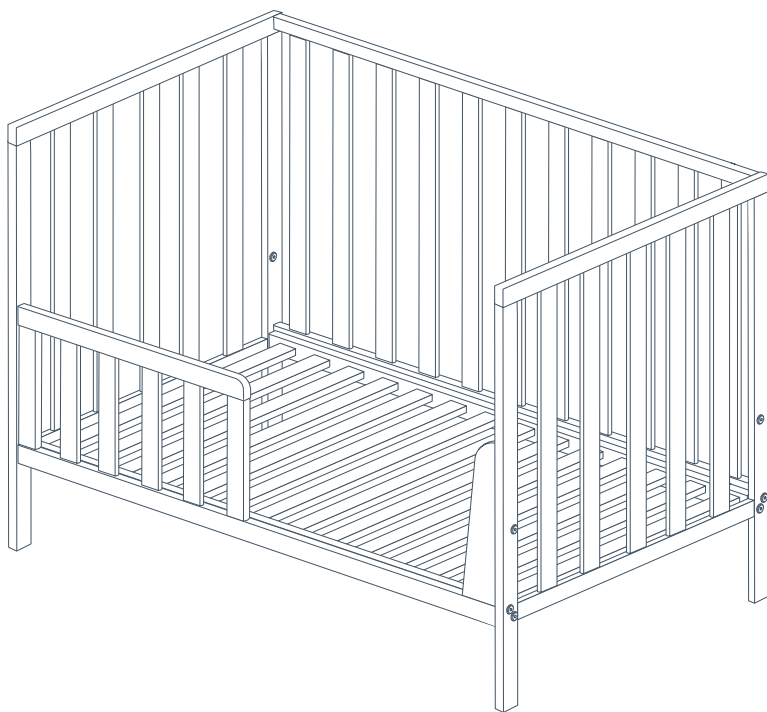

the[★]sleep[★]store

www.thesleepstore.co.nz | www.thesleepstore.com.au

Parts Checklist

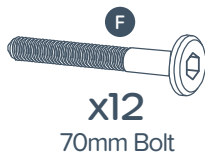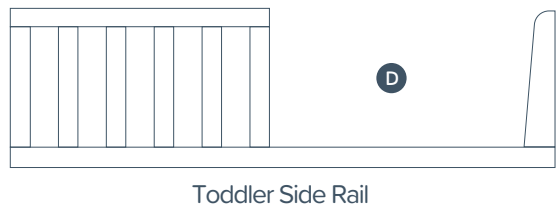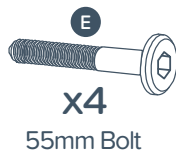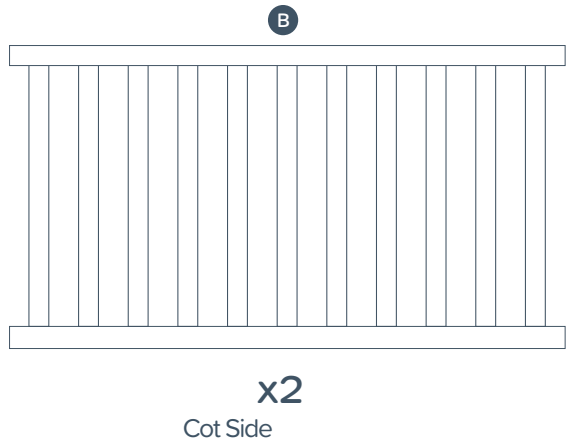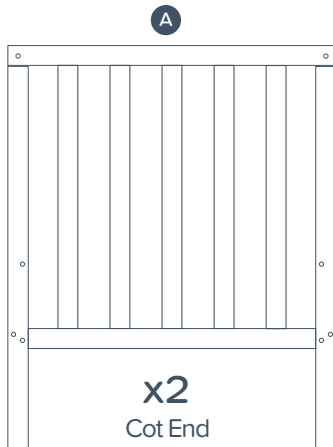

Introducing Frank

Thank you from our family to yours for choosing The Sleep Store. We hope you love your new Frank cot as much as we do!

The Frank 4 in 1 cot adapts as your baby grows. The first mode sets the mattress base higher to make placing and picking up your newborn from the cot easier.

Adapt to the second mode by dropping the mattress base down a level when they show signs of being able to sit up or can pull themselves up.

Use the third mode when they are a toddler, and you are ready for them to get in and out of the cot by themselves, by fitting the toddler rail to one side of the cot.

Lastly, when they have transitioned to a big bed you can convert your Frank 4 in 1 cot to a toddler day bed by removing toddler side rail.

WARNING


TO PREVENT FALLS THE MATTRESS SLATS (C) SHOULD BE ADJUSTED TO THE LOWEST POSITION BEFORE CHILD CAN SIT UP.

WARNING

TO PREVENT FALLS OR SUFFOCATION THE MAXIMUM MATTRESS THICKNESS SHOULD NOT EXCEED 120MM.

Step 1


Decide the height position you would like the mattress slats (C) to be. If the child can already sit up you must adjust the mattress slats to the lowest position. This will help to reduce the risk of falls.

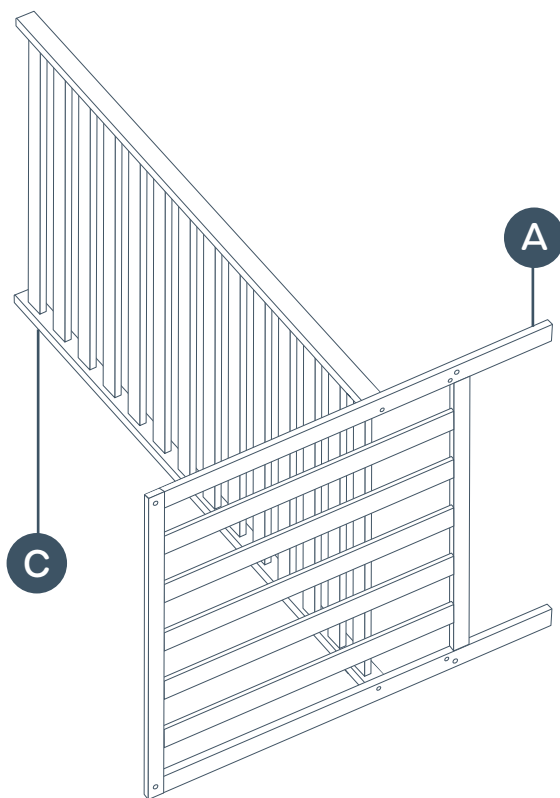

Clear an area on the floor and lay the mattress slat base (C) and cot end (A) on their sides, being careful not to scratch the frame.

Using the Allen key (K) tighten the 70mm bolt (F) and use a screwdriver to make slight adjustments to the nut (G) to align the thread correctly. Repeat this for the remaining bolts that hold both cot ends (A) to the mattress slat base.

You do not need to fully tighten the bolts at this stage, only once all the parts of the cot frame are in place.

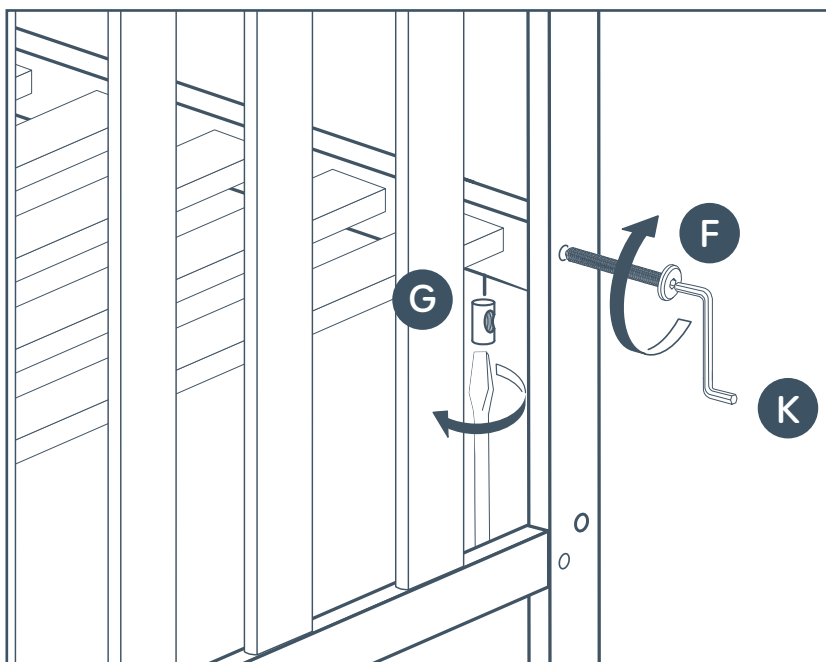


Step 2

Position a cot side (B) and fix to the cot ends (A) with the bolt and nuts, adjusting the bolt if necessary in the same way as in step 1.

If you are assembling the cot with the optional toddler side rail on one of the sides of the cot skip forward to page 8.

With help from another adult stand the cot upright and fix the final side (B). Now all four sides and the mattress base should be in position and secured.

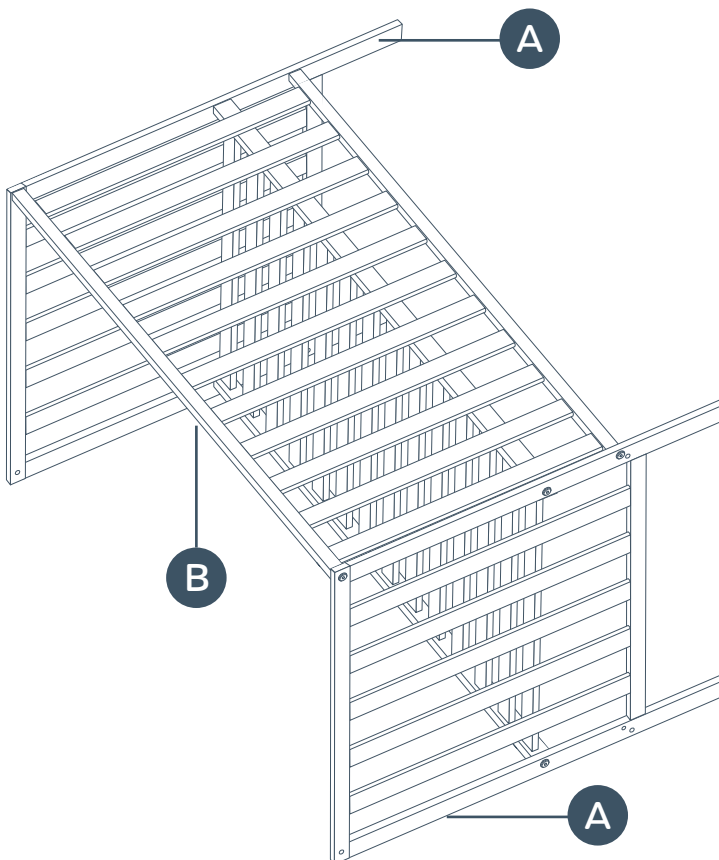


Step 3

Use the 8x 12mm bolts (J) and the 4x 14mm cap nuts (I) and the 4x 30mm bolts (H) to seal the remaining pre-drilled holes in the cot ends (A). This is to prevent baby's fingers from getting caught in the pre-drilled holes.

The holes allow the mattress base to be secured at set heights depending on the age and stage of the baby.

Give all bolts a final check and tighten fully.

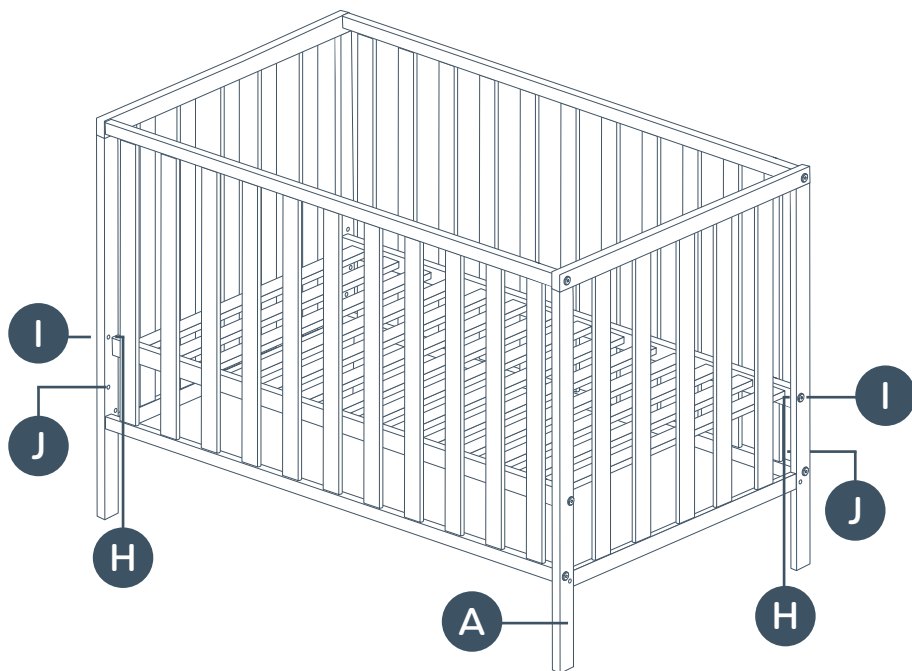


WARNING

ENSURE YOUR CHOSEN LOCATION FOR THE COT IS A REASONABLE DISTANCE FROM CURTAINS, BLINDS, HEATERS, AND POWER POINTS. ALWAYS KEEP MEDICATION, STRING, ELASTIC, SMALL TOYS OR SMALL ITEMS SUCH AS MONEY OUT OF REACH.

Toddler Bed Conversion


The Frank 4 in 1 cot can be converted to a toddler bed when your little one shows signs of being able to climb out of the cot.

Loosen the cot sides and cot base from the cot end panels. Remove the cot side you would like to replace with the toddler rail. Remove bolts I, J and H on the same side too. One cot side must remain in place. Attach the toddler rail with 4x 55mm bolts (E). Use bolts and cap nuts to seal any pre-drilled holes at the top of the cot ends. Tighten all bolts securely.

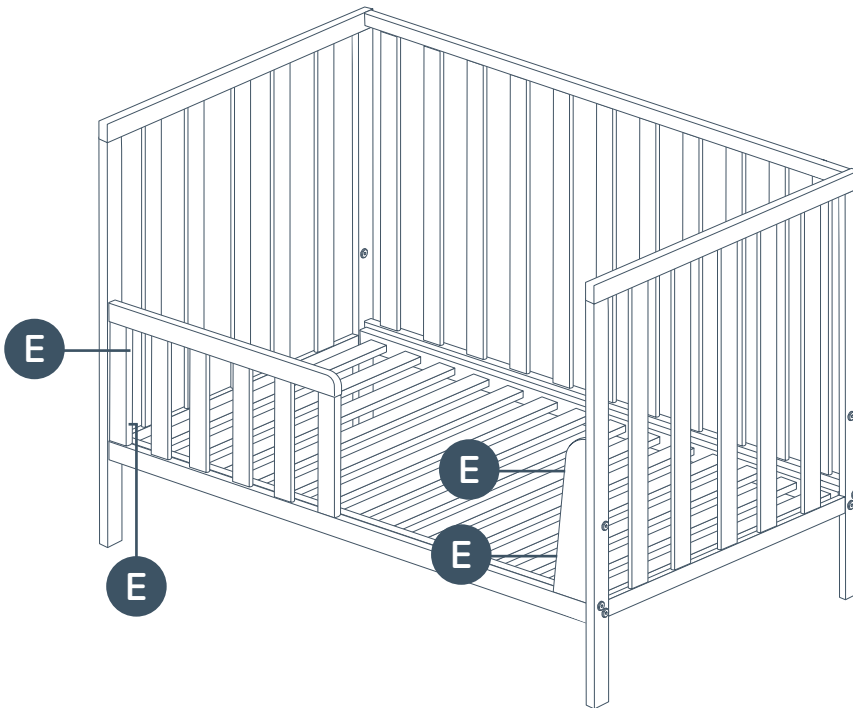

Toddler Day Bed Conversion

To convert your cot in to a toddler day bed. Remove the toddler side rail or cot side. Seal any of the pre-drilled holes with 12mm bolts (J), 4x 14mm cap nuts (I) and the 4x 30mm bolts (H). Fasten bolts tight and remember to check periodically and re-tighten when required.

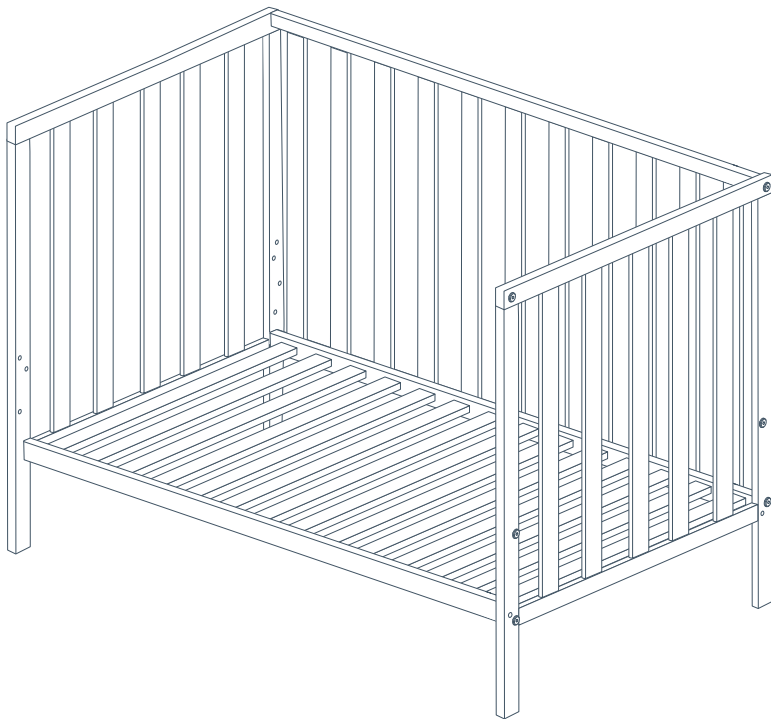

Read Carefully and Keep for Reference

Please read our assembly instructions in detail to ensure the safety features of the cot are not compromised.

WARNING

TO PREVENT FALLS, THE MATTRESS BASE OF THE COT SHOULD BE ADJUSTED TO THE LOWEST POSITION BEFORE THE CHILD CAN SIT UP.

RECOMMENDED MATTRESS SIZE

This cot has been manufactured for use with a mattress which measures 690mm wide x 1300mm long and 120mm in thickness. The width and length are specified because it is important that the gaps between the mattress and the sides and ends of the cot will not exceed 40mm when the mattress is pushed to one side or end, and 20mm when the mattress is centered in the cot. The thickness of the mattress has been specified to ensure that the depth of the cot is greater than 500mm with the mattress base in the lower position to minimise the risk of a child climbing or falling out of the cot.

WARNING

TO PREVENT FALLS, THE MAXIMUM MATTRESS THICKNESS SHOULD NOT EXCEED 120MM

POSITIONING OF THE COT

Ensure the cot is placed on a level, stable surface at a reasonable distance from curtains, blinds, heaters and power points.

Always keep medication, string, elastic, curtain cords, small toys or small items such as money etc, out of reach from any position in the cot. Avoid positioning too close to windows or other furniture. Do not move the cot with the child in it.

Maintenance & Care

All assembly fittings should be tightened properly, checked regularly and re-tightened as necessary.

Your cot can be cleaned by wiping with a damp cloth and drying with a soft clean cloth. Do not use abrasives, bleach, alcohol or ammonia based household polishes.

If part of the cot becomes damaged please contact us for the correct replacement part.

Customer Care

If you have a problem with this product or require replacement parts, please contact The Sleep Store on the details below.

New Zealand

Phone: (09) 816-8706

Email: enquiries@thesleepstore.co.nz

Australia

Phone: 1800 - 630216

Email: enquiries@thesleepstore.co.nz

The Sleep Store Limited, 85C Henderson Valley Road, Auckland, 0612, New Zealand.



www.thesleepstore.co.nz | www.thesleepstore.com.au